


User Manual

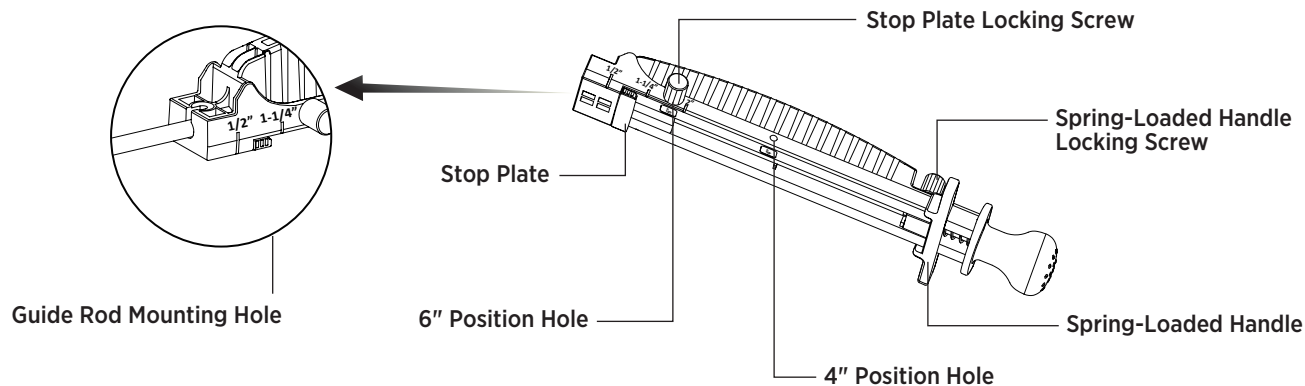

Compatible with SHARPAL 202H and 203H.

Compatible with SHARPAL abrasive plates and most standard $1" \times 4"$ / 25×100 mm and $1" \times 6"$ / 25×150 mm abrasive plates from other brands.

For 4" or 6" abrasive plates: Align the Stop Plate with the matching 4" or 6" Position Hole, then tighten the Stop Plate Locking Screw.

To install or remove an abrasive plate: Loosen the Spring-Loaded Handle Locking Screw before installing or removing the abrasive plate.

After installing the abrasive plate, tighten the screw to secure it in place.

Note: Do not swap the two locking screws. Each screw must stay in its correct position.

SHARPAL products are guaranteed against defects in materials and workmanship for **3 years** from the purchase date. This warranty excludes damage from misuse or alteration, normal wear and tear, and the natural diminishment of consumable items from regular use. Additionally, the warranty is valid only for non-industrial and non-commercial usage. If you want to make a warranty claim, please contact us through SHARPAL website or send an email directly to warranty@sharpal.com.

