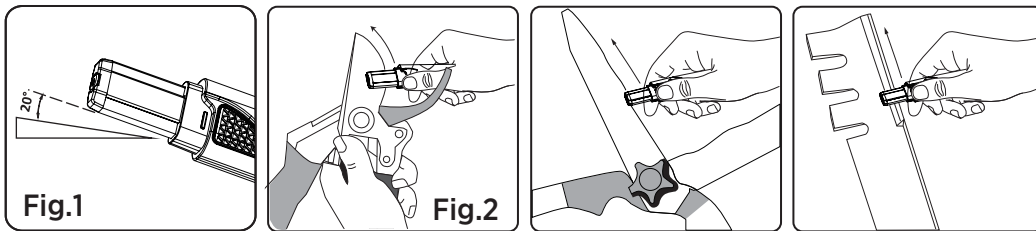


User Manual

**SHARPENING AND HONING INSTRUCTION**

1. Align the cutting edge being sharpened and the sharpening tool at an angle of approximately 20 degrees (See Fig. 1).

Tip: Use the **corner** of the tungsten carbide blade to sharpen the cutting edge.

2. Maintain the angle and repeatedly slide the **corner** of the tungsten carbide along the cutting edge from the heel of the blade toward the tip (See Fig. 2). Continue this motion until the desired sharpness is achieved.

3. Switch to the ceramic blade for honing the cutting edge, following the same process as sharpening.

Note: Most pruning shears, loppers and mower have blades that are only beveled on one side of the blade. Only sharpen the side of each blade that has a bevel. If you are sharpening a double-beveled edge, such as most knife edges, repeat the above process for the underside of the knife blade. Give each side of the blade the same number of strokes to maintain an even cutting edge.

The tungsten carbide is for the dull or damaged edge that requires a new edge setting.

The ceramic blade is suitable for honing a blade.

- Watch its demo video on YouTube: bit.ly/129NVideo
- Or scan QR code

Each SHARPAL product is warranted to be free from defects in material and workmanship for **3 years** from the date of purchase under normal wear and tear, except for damage caused by misuse or alteration. THIS WARRANTY APPLIES ONLY TO NON-INDUSTRIAL OR NON-COMMERCIAL USE. If you want to make a warranty claim, please contact us through the SHARPAL website or send an email directly to warranty@sharpal.com.

